



LILIN Application Note for Luxriot Software Connecting LILIN IP Cameras/DVRs/NVRs

Document Number: A00024

Date: 03/28/2012

Dept: Technical Support, Taipei

Subject: How to use Luxriot to connect LILIN IP cameras or DVRs/NVRs.

Description: This document describes how to use Luxriot software to connect LILIN IP cameras or DVR/NVRs.

Product supported:

LILIN iMEGAPRO 2MP IP cameras, version 1.0.506 or above

L series range, version 1.1.006 or above

LILIN 3 & 5 series DVRs, version 0.0.44 or above

NVR Touch series, version 1.0.38 or above




Luxriot version: 2.2.2.421

Connect to LILIN device

To connect a LILIN device, click on Video node of Luxriot DVR client and select "Camera Setup Wizard".

Connect to LILIN IP Cameras

For connecting LILIN iMEGAPRO or L series cameras, in Camera Setup Wizard, select "ONVIF" compatible driver.

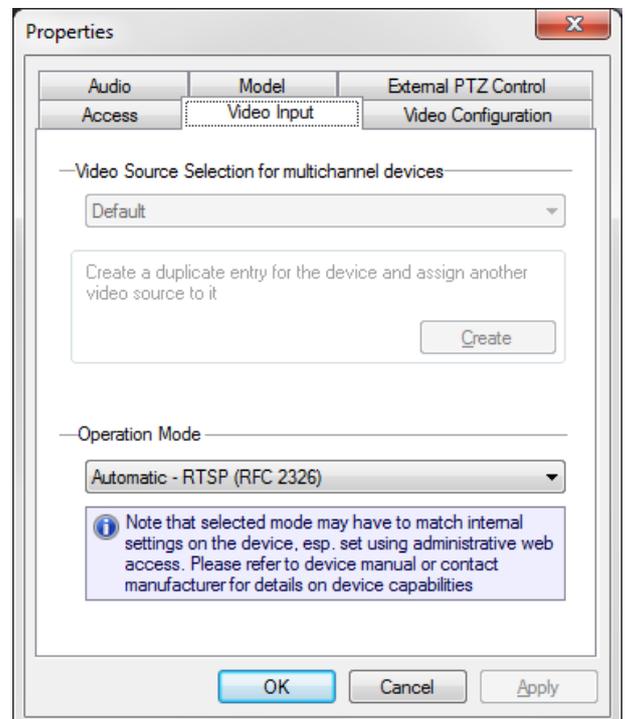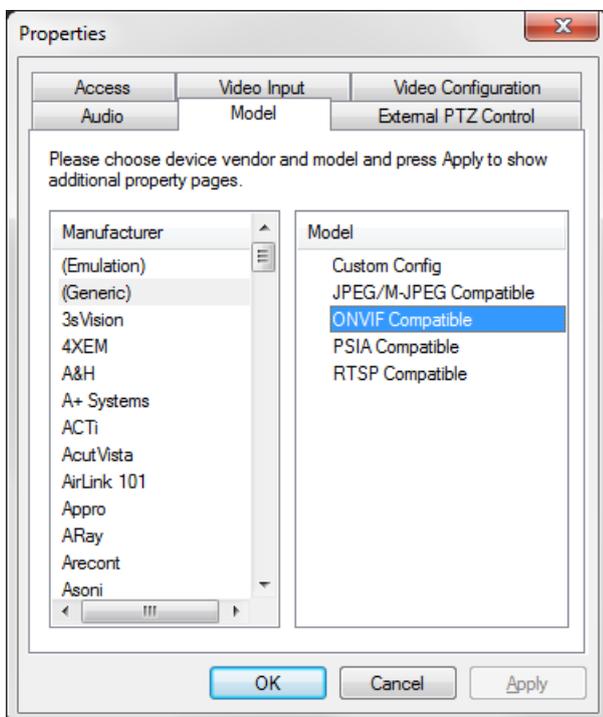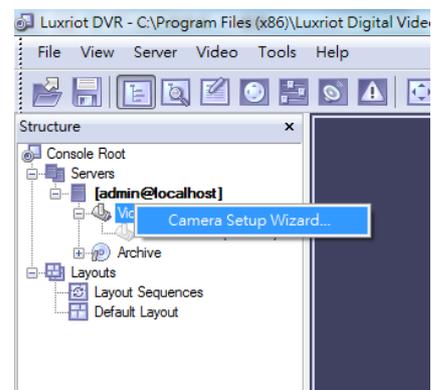

Connect to LILIN DVRs/NVRs


For Connect LILIN DVRs/NVRs, please use MJPG driver.

Please use MJPG CGI commend at M-JPEG/JPEG tab in Luxriot software.

DVR/NVR channel #1: /getimage00


DVR/NVR channel #2: /getimage01

DVR/NVR channel #16: /getimage05

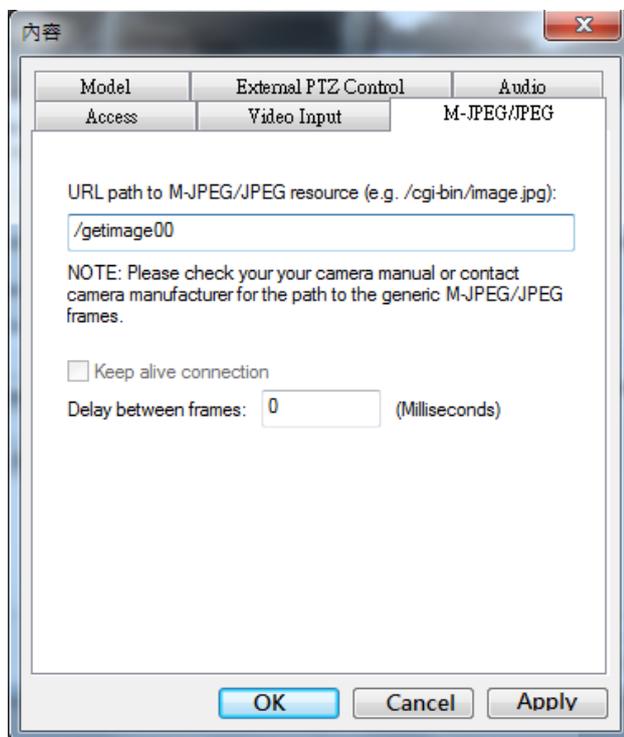

Motion Detection

To use motion detection, please visit Motion Analysis can specify the motion area.

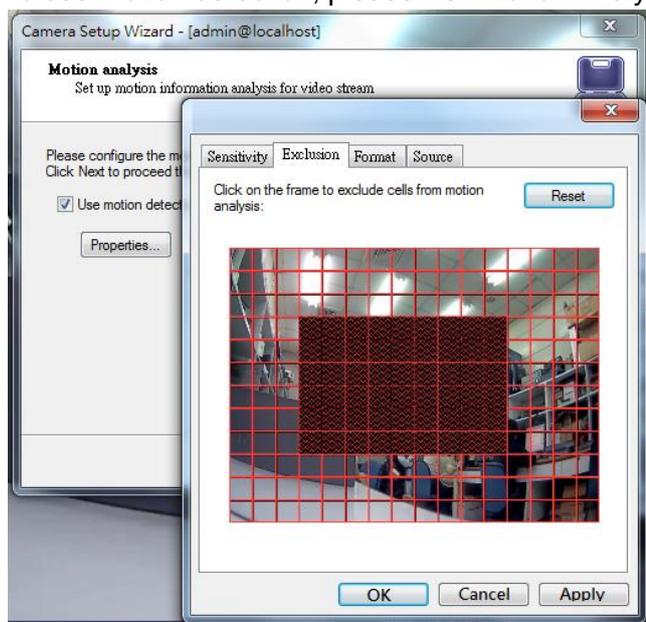

Once the above are done, click on the LILIN device just added and drag it into one of the video frame to see live video.