

Merit LILIN Application Note

How to Add ONVIF Cameras for LILIN NVRs

Document Number: A00047


Date: 2014/05/17

Dept: Technical Support, Taipei


Subject: This document describes how to add ONVIF cameras for NVR116, NVR109, NVR104, NVR404, and VD022.

LILIN NVRs and video decoder support ONVIF Profile S cameras. To add ONVIF cameras to NVRs and video decoders, please follow steps below:

Step #1: Select Setup->Camera->IP Camera Setup.

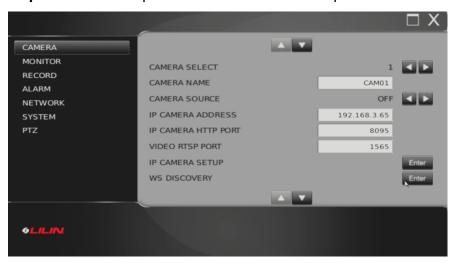


Step #2: Select RTSP type such as RTP RTSP/TCP for the ONVIF camera. Enter username and password for the camera.

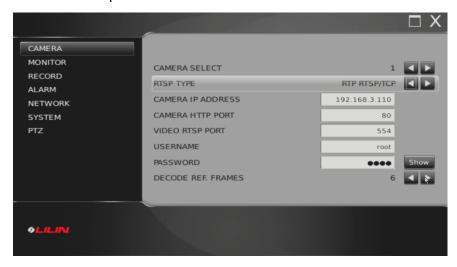




Step #3: You can also use WS-Discovery for scanning third-party ONVIF cameras automatically. Select Setup->Camera->WS Discovery for scanning IP cameras.

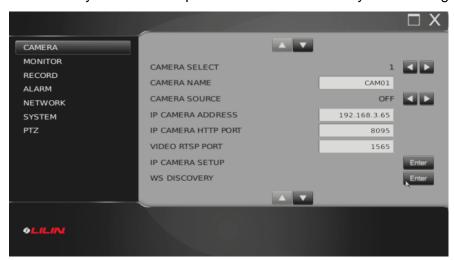

Step #4: All ONVIF based cameras can be scanned and listed. Assign the channel for the camera.

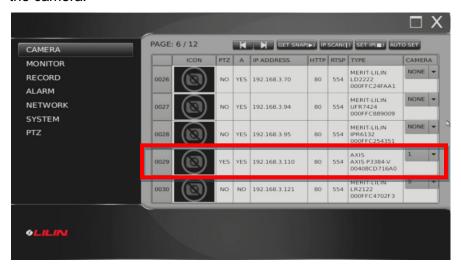

Step #5: Click on X button to return to live monitoring mode. You can right-mouse click on a channel to see dual-streaming statistics.




Note: LILIN NVRs and video decoders support only dual-streaming cameras. No resolution higher than 1080P is supported.



Step #6: You can also use the web interface at Configure->WS Discovery of the NVR or video decoder for scanning the ONVIF camera. Assign camera's channel for adding the ONVIF camera.



Step #7: Enter username and password, and RTSP for the camera.

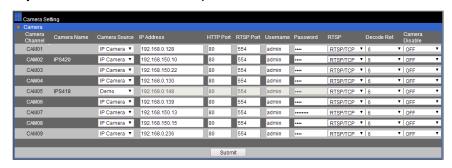

Note: Make sure that LILIN NVR or video decoder firmware is 1.0.47n or above.