


How to change the SIP extension dialled by the Door Station when the ring button is pushed.

- To change the extension that is dialled when the ring button on the front of the Door Station is pressed, log in to the Door Stations' web interface and select '**Setup**' from the top right hand side of the live display page.
- Once in '**Setup**' select '**Advance Mode**' from the bar at the top.
- Now select '**network**' and then '**SIP**'.
- Under the SIP screen you have an Extension dropdown, this is where you configure your SIP call details. The Door Station will allow up to 8 different SIP extensions to be programmed for outbound dialling.
- Select the required extension number and then fill in all the details required for that extension to be able to dial out. Once this is done select '**Submit**'.

Extension	Ext. 8 <input type="button" value="▼"/>
Remote Username	108
Remote IP	192.168.67.215
Remote Port	5060
Call Status	Ready
<input type="button" value="Submit"/> <input type="button" value="Call"/> <input type="button" value="End"/>	

- Now the correct extension details have been added, you will need to adjust the ring button function. To do this select '**Event**' from the top menu bar and then select '**Door Station**' from the left hand menu and then the '**Ring button**' option.

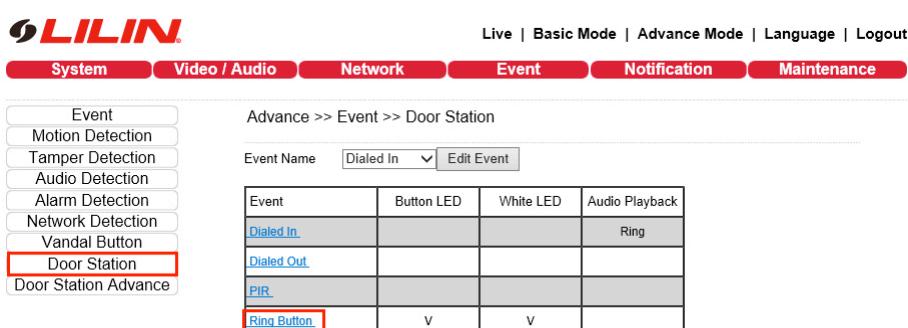

Live | Basic Mode | Advance Mode | Language | Logout

System Video / Audio Network Event Notification Maintenance

Event Motion Detection Tamper Detection Audio Detection Alarm Detection Network Detection Vandal Button **Door Station** Door Station Advance

Advance >> Event >> Door Station

Event Name

Event	Button LED	White LED	Audio Playback
Dialed In			Ring
Dialed Out			
PIR			
Ring Button	V	V	

- Once in the '**Ring Button**' screen adjust the SIP extension option at the bottom of the page. Finally, select the SIP extension you would like to dial once the ring button has been pressed.

Event
Motion Detection
Tamper Detection
Audio Detection
Alarm Detection
Network Detection
Vandal Button
Door Station
Door Station Advance

Advance >> Event >> Door Station

Event Name: Ring Button
Button LED: Off On Flashing
 Night
 Constant On
White LED: Off On
Dwell Time: 5 Sec.
Audio Playback: None
SIP Extension: 1
Submit Cancel