



How to change the local alert made by the Door Station when the ring button is pressed

- When the door station ring button is pressed by someone at the door it is possible to have the door station play an alert noise to confirm the button has been pressed.

This alert can be changed or disabled as required.

- To change or disable the alert sound that is played when the door station ring button is pressed, log in to the Door Stations' web browser and select '**Setup**' from the top right hand side of the live display.
- Once in the '**Setup**' menu select '**Advance Mode**' from the bar at the top.
- Next select '**Event**' and then '**Door Station**' from the menu on the left and then the '**Ring Button**' option.

Live | Basic Mode | Advance Mode | Language | Logout

System Video / Audio Network Event Notification Maintenance

Event Motion Detection Tamper Detection Audio Detection Alarm Detection Network Detection Vandal Button **Door Station** Door Station Advance

Advance >> Event >> Door Station

Event Name

Event	Button LED	White LED	Audio Playback
Dailed In			Ring
Dailed Out			
PIR			
Ring Button	V	V	

- In the door station menu, you will then see a dropdown option labelled '**Audio Playback**'. You can then select the required option from the dropdown menu.

Event Motion Detection Tamper Detection Audio Detection Alarm Detection Network Detection Vandal Button **Door Station** Door Station Advance

Advance >> Event >> Door Station

Event Name **Ring Button**

Button LED Off On Flashing Dwell Time Sec.

Night Constant On

White LED Off On Dwell Time Sec.

Audio Playback

SIP Extension