



Enable HDD Temperature Warnings

If you wish to enable HDD temperature warnings on a LILIN NVR, it is possible to get the NVR to alert in various ways if the temperature of a HDD surpasses the set threshold.

When set, if the temperature of a HDD reaches the set alert threshold, the NVR can trigger the onboard buzzer, send an email or a push notification direct to the LILINPro app.

To configure HDD temperature alerts, go to System → Storage.

Within the storage menu click the Parameters box and set the required value in the HDD Temperature field.

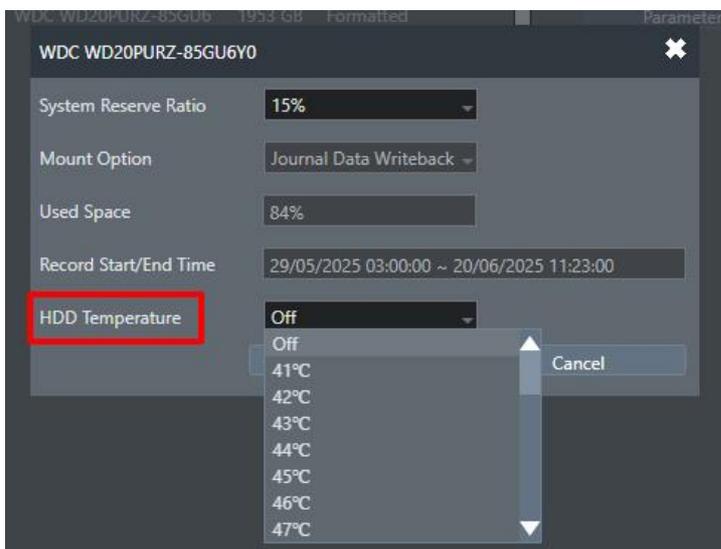
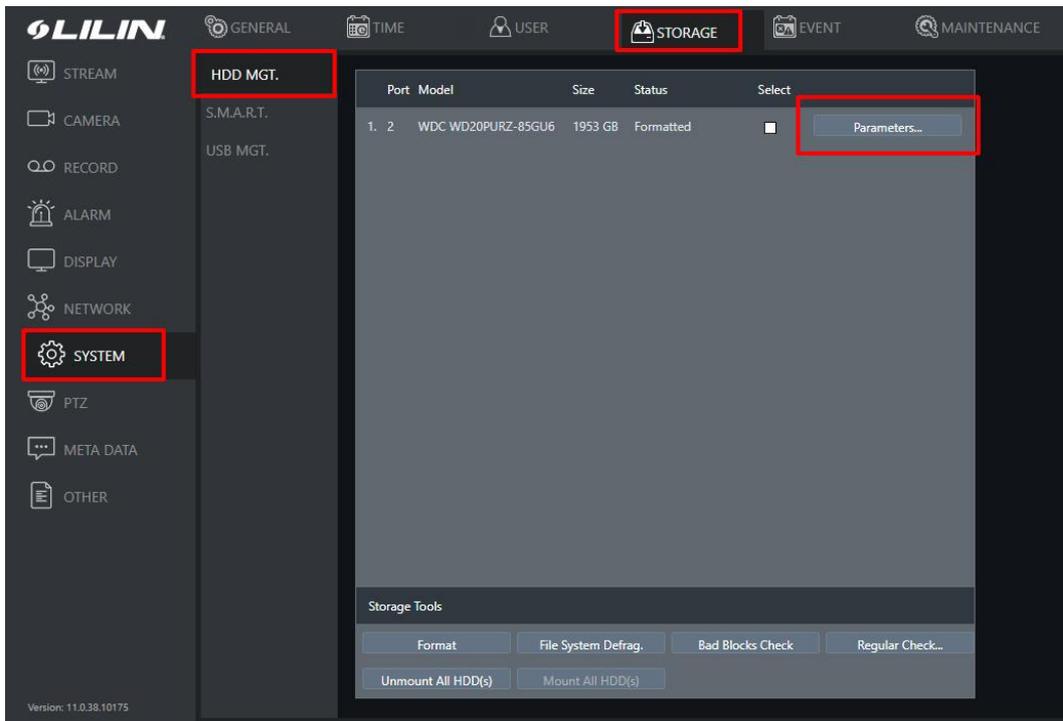


Once the temperature value has been set, the next step will be to configure the type of alert you require. To do this, navigate to the Alarm → Output and then select either Buzzer, E-mail or Notification.

In this example we will use notification, but you can set all 3 if required.

If selecting email, please ensure the NVR has the correct SMTP details to allow it to successfully send emails.

Select notifications and then click System Events. Within the new popup window select HDD Temperature High.

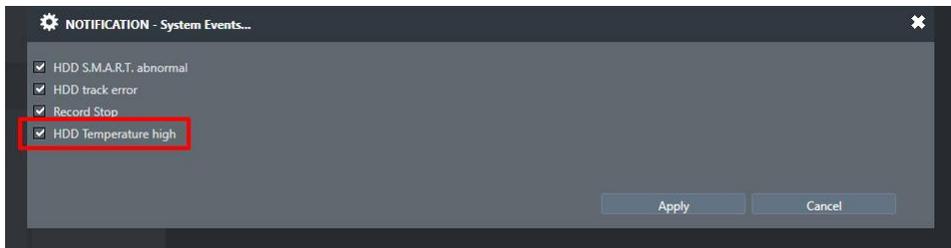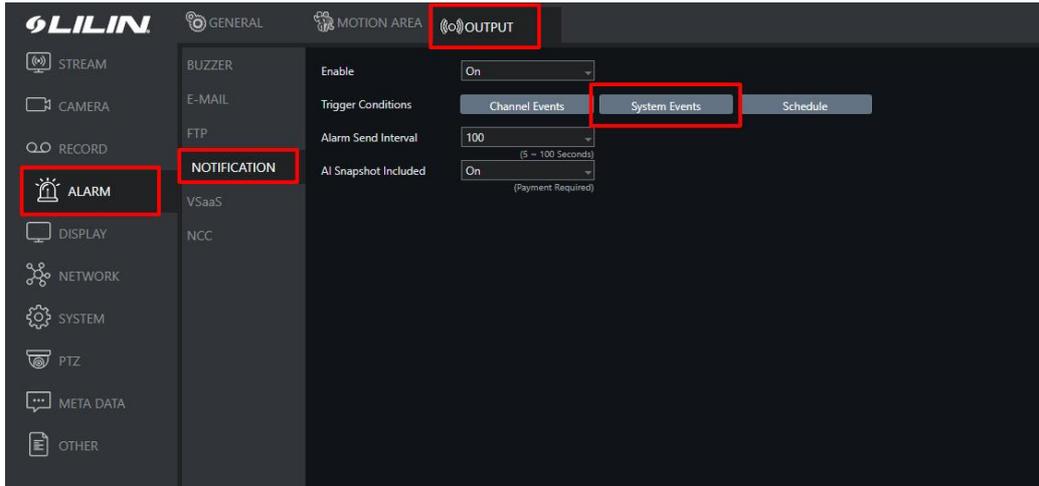

To find the existing temperature of the HDD, you can see this under the System → Storage → S.M.A.R.T

