

Configuring a GJD IP PIR detector with a LILIN ZHR IP Camera for remote alarm detection

This guide assumes that you have already configured your LILIN IP camera and GJD IP detector.

Log in to the GJD detector and select 'Event' from the menu bar. Ensure the 'Events Enabled' radial box is select.

You will then see an 'Add Event' box towards the right-hand side of the screen, click this.



A popup window will now open. In this popup window, enter the trigger condition values that would you like to associate with this rule.

This guide will use the basic settings; however, these can be adjusted to meet your requirements.

D-TECT IP					
Events Sensor settings Unit c	onfiguration Import a	and export settings	Firmware update	Logout	
Events enabled: Events dis	abled: O				Add event
Add	event				
Name	e:	LILIN IP Camera		×	
Input		PIR de	etection	•	
Delay	/ (S):	0			
Timeout (s):		5			
Even	t activation:	Alv	vays	•	
Light	limit (lux):	5			
Canc	el Add event				



Once your event has been successfully added you will be returned to the 'Event' screen. You will now see an additional 'Add Action' box, click this.



An add action window will now be displayed. Under 'Action Type' select 'Connect to URL.





Enter the Event start and Event Stop URL's in the relevant boxes and click 'Add Action'. Ensure that you use the correct username, password and IP address for your IP camera. The authentication type must be set to 'Basic'.

Event Start URL:

http://<USERNAME>:<PASSWORD>@<IPADDRESS>/mdmotion?&ALARM_FLAG=1&ALARM_FLAG_NO=0

Event Stop URL:

http://<USERNAME>:<PASSWORD>@<IPADDRESS>/mdmotion?&ALARM_FLAG=1&ALARM_FLAG_NO=1

D-TECT IP	
Events Sensor settings Unit configuration Import and export settings Firmware update Logout	
Events enabled: Events disabled:	Add event
LILIN IP Camera (PIR detection) Addraction	Edit Remove
Add action	
Action type: Connect to URL	
Event start URL:	
http://admin:pass@192.168.67.219/mdmotion?&ALARM_FLAG=1&ALARM_FLAG_NO=0	
Event stop URL:	
http://admin:pass@192.168.67.219/mdmotion?&ALARM_FLAG=1&ALARM_FLAG_NO=1	
Authentication: Basic	
Cancel Add action	

Your GJD detector is now configured.

D-TECT IP							
Events	Sensor settings	Unit configuration	Import and export settings	Firmware update	Logout		
Events	Events enabled: Events disabled:						
LILIN IP Camera (PIR detection)						Edit Remove	
Lilin ca	amera Tes	t Remove Ed	lit				
Add	action						



The next step is to log in to your LILIN IP camera and navigate to the following menu:

Setup \rightarrow Advance Mode \rightarrow Event \rightarrow Alarm Detection

9LILIN.			Live Basic Mode Advance Mode Language Logour				
System	Video / Audio	Network	Event	Notification	Maintenance		
Event	Advance	>> Event >> Aları	n Detection				
IVS)						
Motion Detection	Alarm Notifi	cation	Enable O Disable				
Tamper Detection	Alarm Input	Mode					
Audio Detection)		0.100.010				
Alarm Detection	<u>j</u>		Submit				
Network Detection	5		oublin				
Push Service Setting							

Ensure that the alarm notification is set to 'Enable' and the alarm input type is set to 'NO'.

Switch back to your GJD detector and press the 'Test' button.

D-TECT IP						
Events	Sensor settings	Unit configuration	Import and export settings	Firmware update	Logout	
Events	enabled: • Eve	ents disabled: \bigcirc				Add event
LILIN Lilin ca	IP Camera (PIR amera Tes	R detection) It Remove Ed	lit			Edit Remove
Add	action	_				

You should now see a red 'A' appear on your cameras image. This is the GJD triggering the cameras NO/NC alarm input and the camera generating its digital alarm.

