



Configuring a GJD IP PIR detector with a LILIN iMEGAPRO IP Camera for remote alarm detection

This guide assumes that you have already configured your LILIN IP camera and GJD IP detector.


Log in to the GJD detector and select 'Event' from the menu bar. Ensure the 'Events Enabled' radial box is select.

You will then see an 'Add Event' box towards the right-hand side of the screen, click this.



A popup window will now open. In this popup window, enter the trigger condition values that would you like to associate with this rule.

This guide will use the basic settings; however, these can be adjusted to meet your requirements.

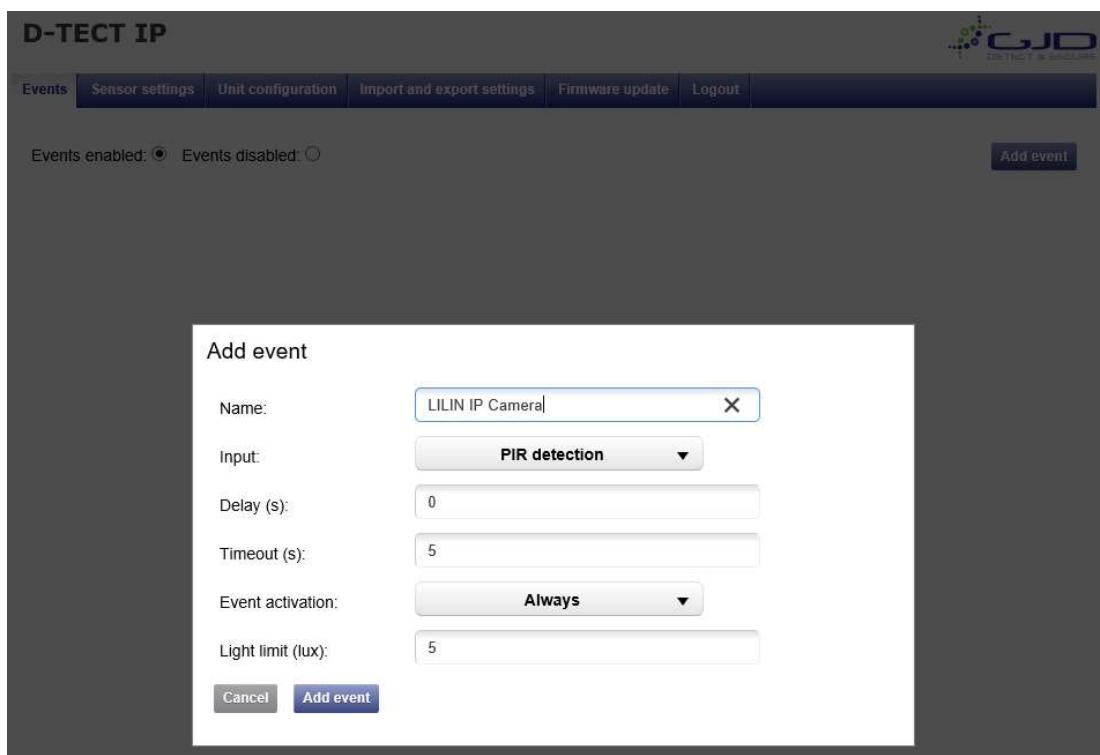



Once your event has been successfully added you will be returned to the 'Event' screen. You will now see an additional 'Add Action' box, click this.

D-TECT IP



Events Sensor settings Unit configuration Import and export settings Firmware update Logout

Events enabled: Events disabled:

Add event

LILIN IP Camera (PIR detection)

Edit Remove

Add action

An add action window will now be displayed. Under 'Action Type' select 'LILIN Camera'.

D-TECT IP



Events Sensor settings Unit configuration Import and export settings Firmware update Logout

Events enabled: Events disabled:

Add event

LILIN IP Camera (PIR detection)

Edit Remove

Add action

Add action

Action type:

Output 1

- Clarius IP Illuminator
-
- GJD Visualiser Event
- GJD Visualiser Heartbeat
- GJD IPA
-
- Axis camera
- Bosch camera
- Dahua camera
- Genie camera
- Hikvision camera
- Lilin camera
- Mobotix camera



Enter the details for your LILIN IP camera and click 'Add Action'.

D-TECT IP

Events Sensor settings Unit configuration Import and export settings Firmware update Logout

Events enabled: Events disabled: Add event

LILIN IP Camera (PIR detection)

Add action Edit Remove

Add action

Action type: Lilin camera

Camera IP: 192.168.67.217

Camera port: 80

Username: admin

Password: pass

Cancel Add action

Your GJD detector is now configured.

D-TECT IP

Events Sensor settings Unit configuration Import and export settings Firmware update Logout

Events enabled: Events disabled: Add event

LILIN IP Camera (PIR detection)

Lilin camera Test Remove Edit

Add action



The next step is to log in to your LILIN IP camera and navigate to the following menu:

Setup → Advance Mode → Event → Alarm Detection

LILIN [Live](#) | [Basic Mode](#) | [Advance Mode](#) | [Language](#) | [Logout](#)

[System](#) [Video / Audio](#) [Network](#) [Event](#) [Notification](#) [Maintenance](#)

Event	Advance >> Event >> Alarm Detection
IVS	
Motion Detection	Alarm Notification <input type="radio"/> Enable <input checked="" type="radio"/> Disable
Audio Detection	Alarm Input Mode <input type="radio"/> NO <input checked="" type="radio"/> NC
Alarm Detection	
Network Detection	

Ensure that the alarm notification is set to 'Disable' and the alarm input type is set to 'NC'.

Switch back to your GJD detector and press the 'Test' button.

D-TECT IP 

[Events](#) [Sensor settings](#) [Unit configuration](#) [Import and export settings](#) [Firmware update](#) [Logout](#)

Events enabled: Events disabled: [Add event](#)

LILIN IP Camera (PIR detection) [Edit](#) [Remove](#)

Lilin camera [Test](#) [Remove](#) [Edit](#) [Add action](#)

You should now see a red 'A' appear on your cameras image. This is the GJD triggering the cameras NO/NC alarm input and the camera generating its digital alarm.

