



## Merit LILIN Application Note

How to connect to IP camera via IPV6

**Document Number :** A00155

**Date :** 2018/07/06

**Dept:** Technical Support, Taipei

**Subject:** How to connect to IP camera via IPv6

**Device supported:** All of LILIN IP cameras

**Description:** This article will guide you how to connect to the IP camera via IPv6 in the intranet.

### Step #1. Set IPv6 on IP camera.

Login LPR camera, go to Basic >> Network >> General IPv6, and set the parameters as below.

http://192.168.3.242/new/setup.htm

MR8322

**LILIN** Live | Basic Mode | Advance Mode | Language | Logout

System Video / Audio Network Maintenance

Basic >> Network >> General IPv6

General  
General IPv6  
HTTP/RTSP Service  
HTTPS Service  
DDNS

Network ☒ On ☐ Off

IP Address 2018::101 /64

Default Router 2018::1 x


Default DNS



Submit

1. Network: Select On.
2. IP Address: Enter IP address with IPv6 format.
3. Default Router: Enter IP address of the default router with IPv6 format.

### Step #2. Set IPv6 on the PC.


Go to Control Panel >> Network and Internet>> Network Connections. Set IPv6 for the PC.

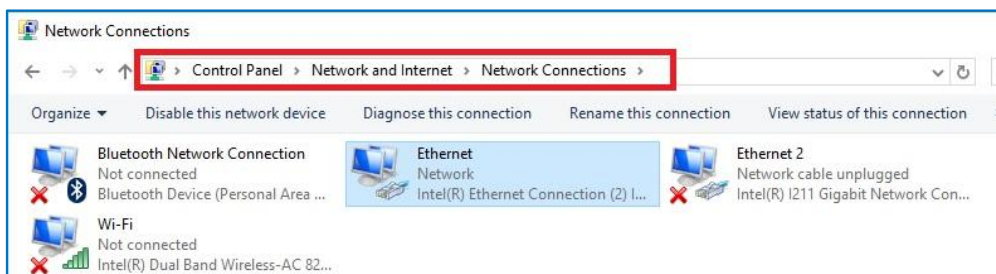

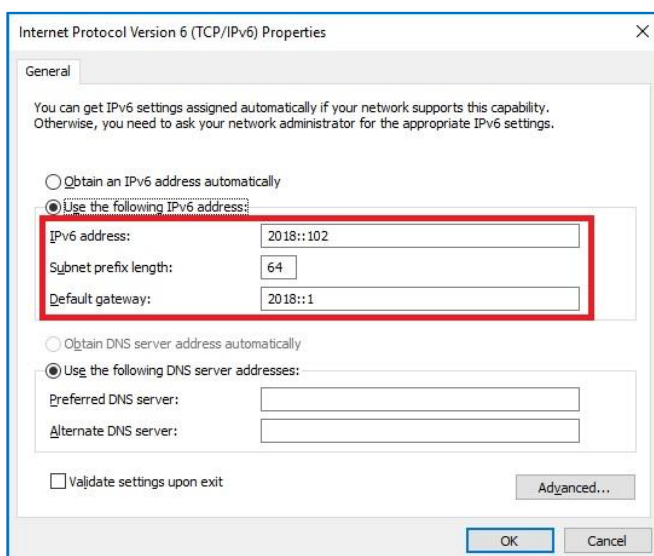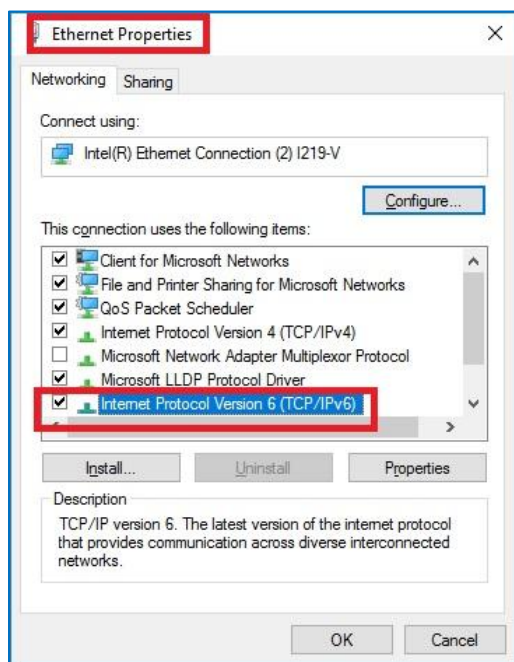

### Step #3. Connect to IP camera via IE.

Enter [http://\[IP address\]](http://[IP address]) on IE address bar and ID & password. You will see the video from the camera.

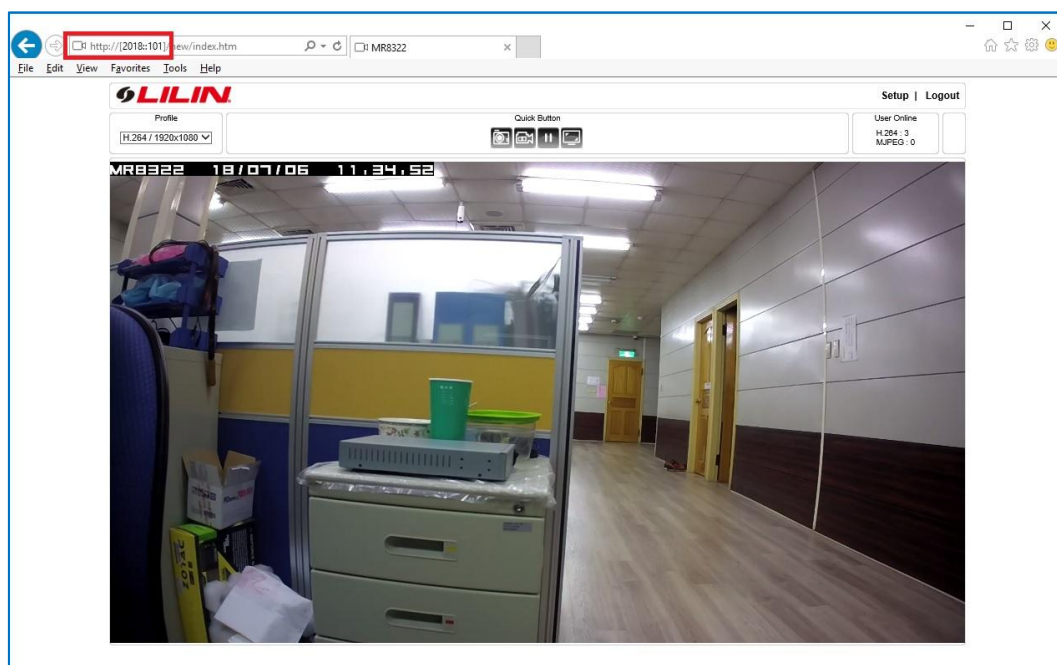

Contact  
Contact [lilin.zendesk.com](http://lilin.zendesk.com) for technical support.