

## Merit LILIN Application Note

### How to Setup Two-way Audio for IP Camera

Document Number : A00068  
Date : 01/30/2015  
Dept : Technical Support, Taipei

**Subject:** How to setup two-way audio for IP camera

**Description:** This document describes how to setup two-way audio by ZR2322.

#### Step #1:

Connect the speaker with 3.5 mm audio jack and the microphone to the camera which goes to the "Audio In" for the microphone and "Audio Out" for the speaker. The microphone and speaker are the same type we use for a PC shown below.



#### Step #2:

Use IE browser to login the camera and go to the "Audio Adjust" as shown below. The "Audio" needs to be enabled.





### Step #3:

Enable the Speaker in IE browser by clicking on the speaker button.



### Step #4:

Enable the Microphone by clicking on the microphone button.

