




## Enabling the Trace Log feature on a LILIN NVR 5 Series


The NVR trace log can be enabled by both the local monitor and mouse or the web GUI. The process is the same for both.

First, enter the NVR menu and select 'System' from the left menu bar. Now select the 'Maintenance' Tab in the top menu bar.

Within the maintenance tab select 'Tools'

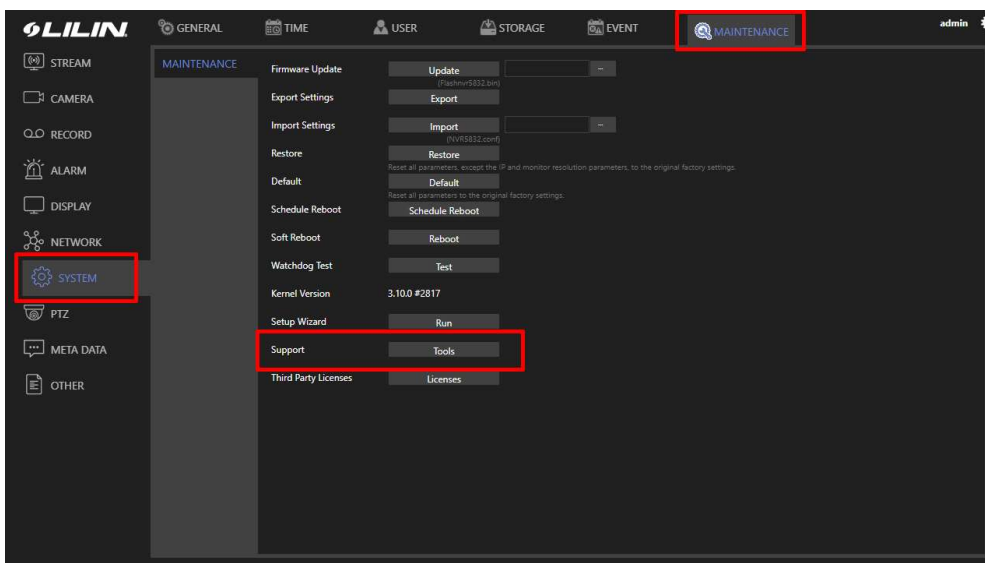

Within the popup box select 'HDD' from the execution log dropdown and click 'Set' then click 'OK'.

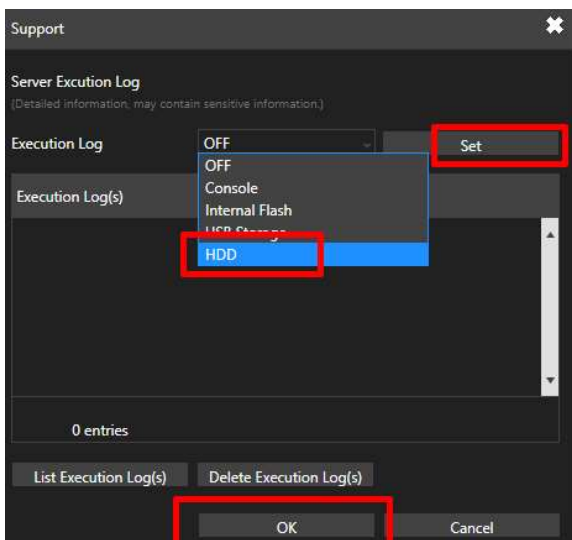

The trace log is now set.

Your LILIN support representative will tell you what to do next.