

Merit LILIN Application Note

How to use Advanced IPScan


Document Number : A00091

Date : 09/22/2015

Dept : Technical Support, Taipei


Subject: This document describes how to use Advance IPScan.

For batch setup, please select multiple devices in IPScan. You can then apply batch setup for (1) IP address setting, (2) Time sync, (3) Firmware update, and (4) time sync.

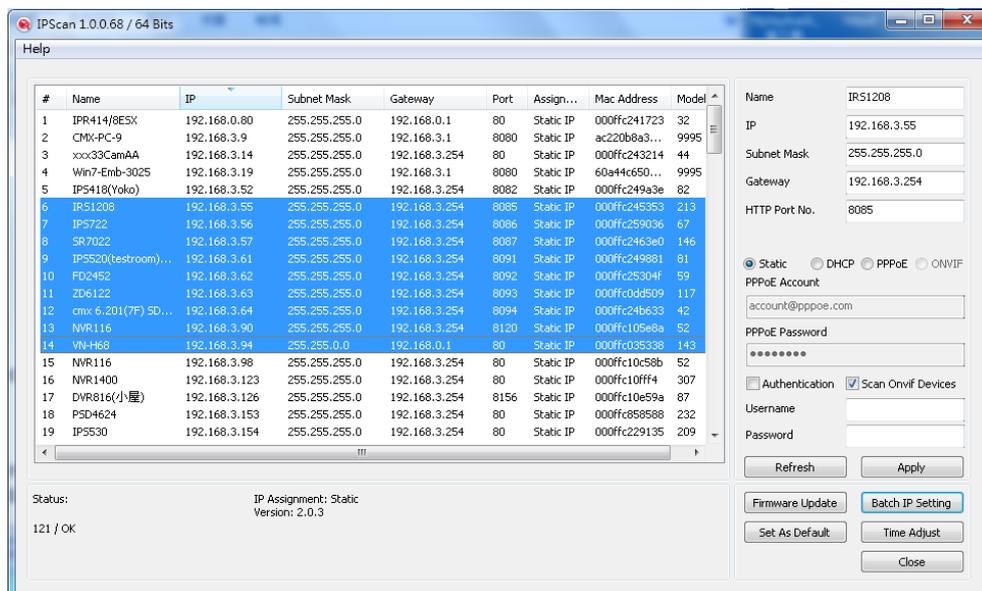


1. Batch IP Setting

This feature is to assign IP addresses starting from one IP address. Please fill the "IP Start From" IP address. Click on "Set" button. The selected devices will be set automatically.

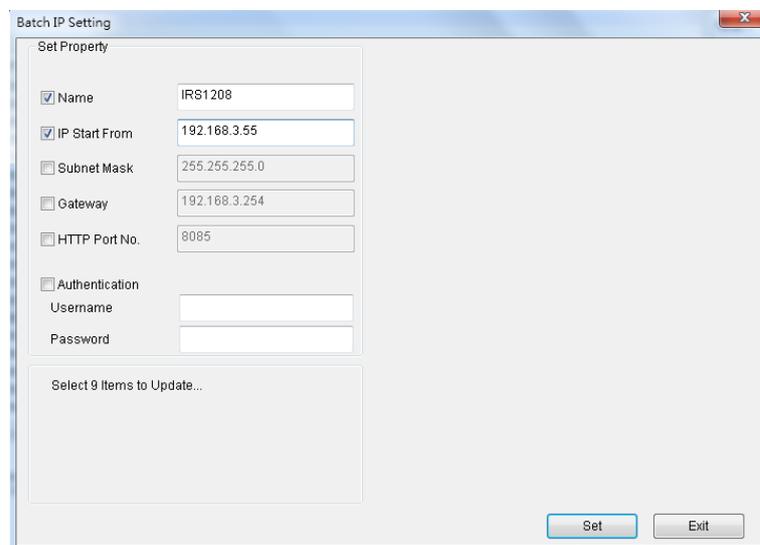


2. Batch Firmware Update

Select multiple devices and click on “Firmware Update” button. Click the “Start” button. A file dialogue box shows up for selecting the firmware file. All the selected devices will receive the firmware update.

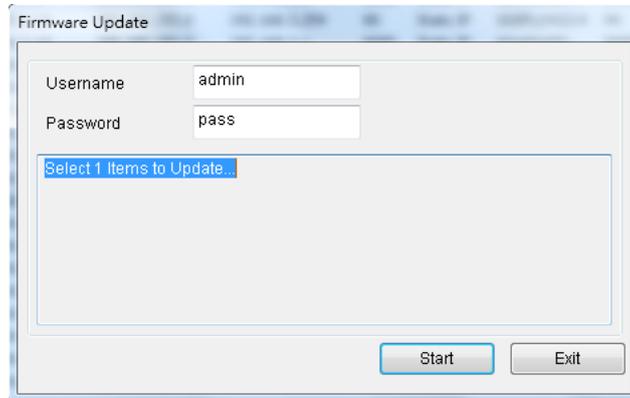


3. Batch IP Camera Configurations Update

Change the IP camera configurations via the web interface. Once it is done, visit Maintenance->Firmware Update. Export the camera configurations into a PC by click “Export” button for later use.

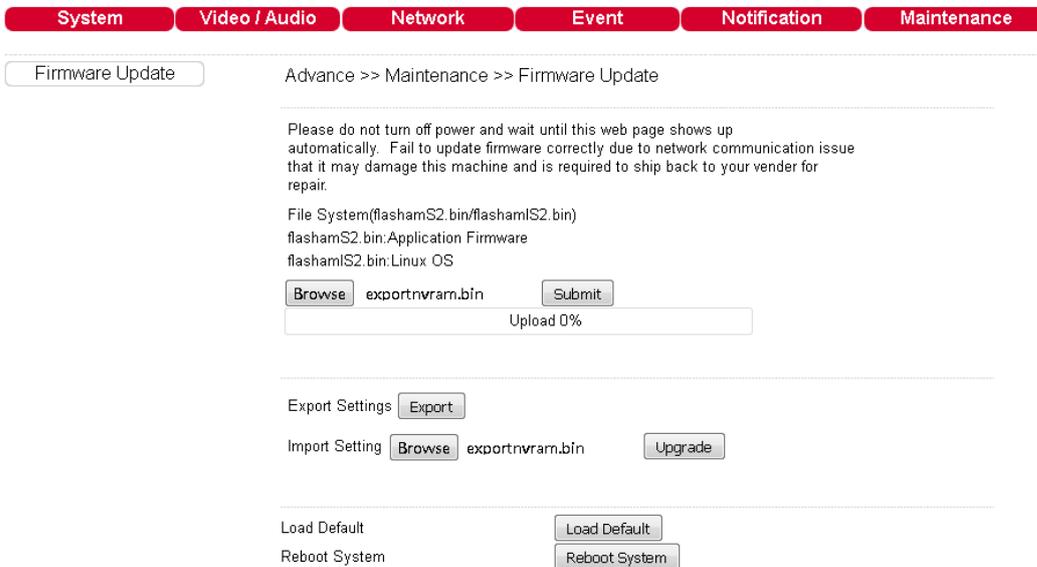


For batch configurations update for cameras, select multiple devices and click on “Firmware Update” button in IPScan. Click the “Start” button. A file dialogue box shows up for selecting the configuration file, “exportnvram.bin.” All the selected devices will get updated by the configurations.

Note: Make sure that this can work only for devices having same model number/product code.

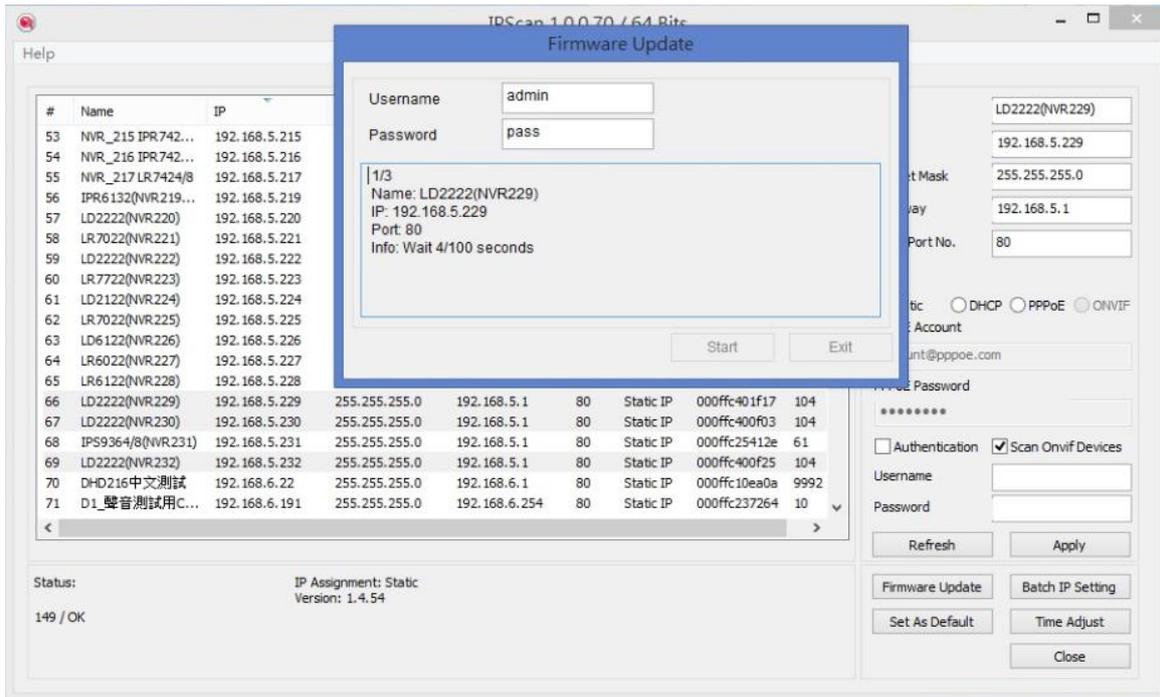

4. Time Adjust

Advanced IPScan uses the PC's time to sync all the selected devices. Click the "Start" button to sync the time.

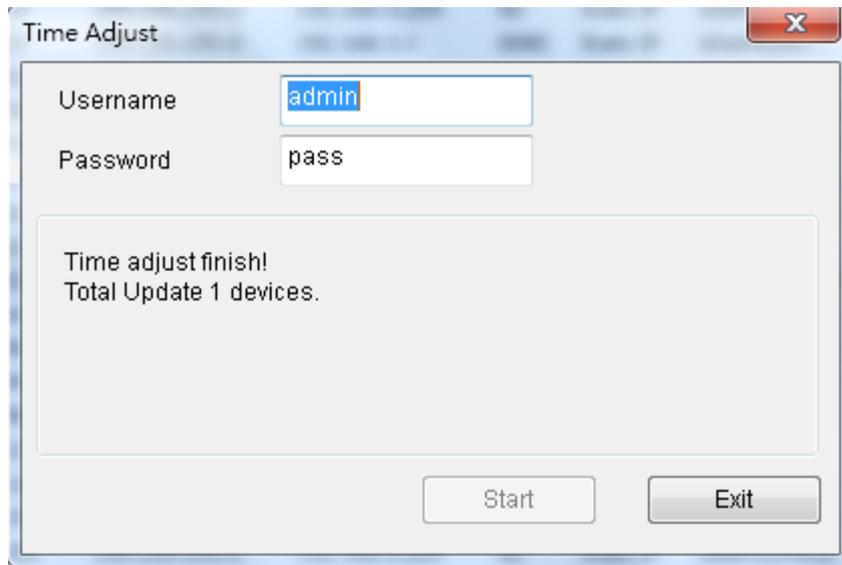

5. Set As Default

This feature restores all the selected IP cameras back to the software default.

For more information, please contact fae@meritlilin.com.tw.