



Installation for the iLook Camera

Demo Model : IPC-T260H-MU

Plug the camera directly into POE switch an ethernet port directly, change your PC IP address to 192.168.1.x, subnet mask 255.255.255.0, and leave the rest blank. Then open up a browser and enter: <http://192.168.1.64> . once it's initialized you can change the camera's IP address in the configuration page to 192.168.x.x whatever you want.


<https://www.hikvision.com/en/support/tools/desktop-tools/sadp-for-windows/>

1.) Run the SADP and scan for the IP cam



2.) Double click at the scanned IP Cam to login the Cam

3.) Or <http://192.168.1.x> displayed with the SADP to login the Cam

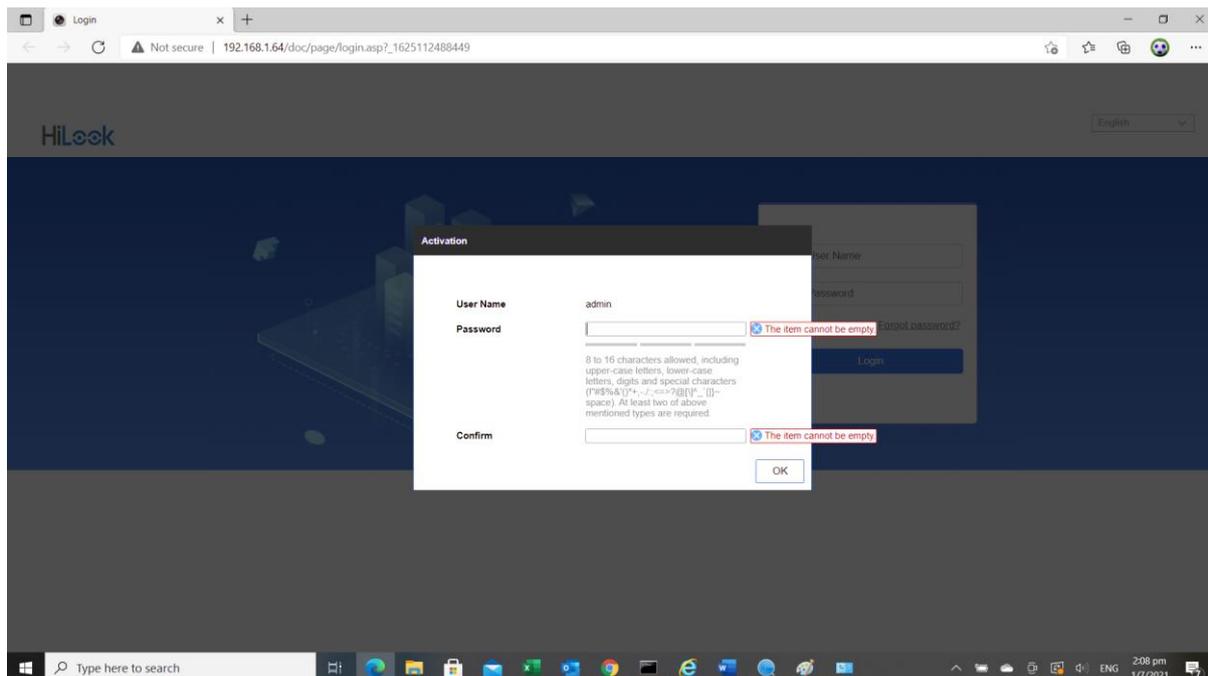

[Type here]



4.) Go network and Enable the ONVIF, and add an account different of the IP cam account.

i.e adminonvif with admin role

rsion 18.12

ist

Add user [X]

User Name ✓

Digits, lower case letters, upper case letters, and special characters (!#\$%&'()*+,-./;<=>?@[^_`{|}~ space) are allowed.

Password ✓

Strong

8 to 16 characters allowed, including upper-case letters, lower-case letters, digits and special characters (!"#\$%&'()*+,-./;<=>?@[^_`{|}~ space). At least two of above mentioned types are required.

Confirm ✓

Level

Media user


Operator

Administrator

OK Cancel


5.) Change the IP address for the IP cam network

[Type here]

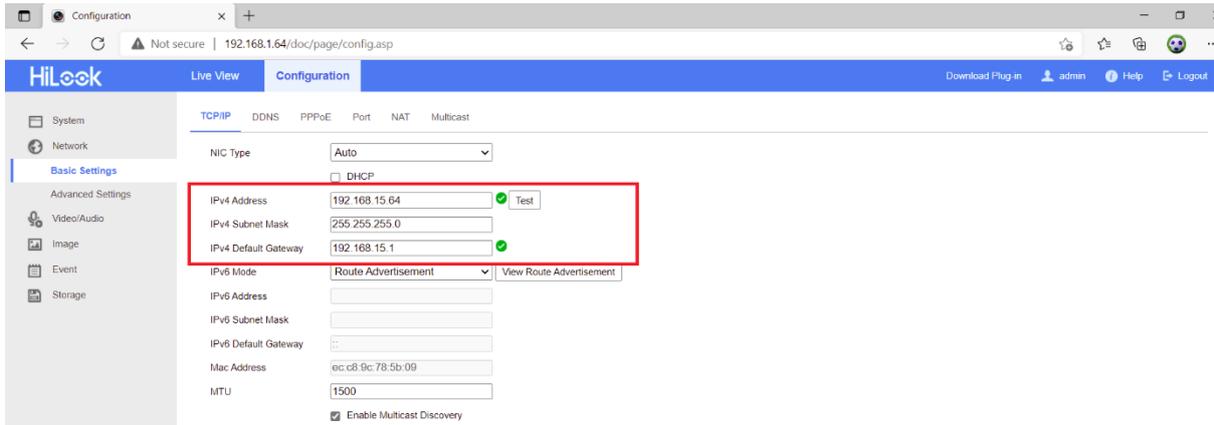

6.) Add the IP cam under the Lilin cam with ONVIF account created i.e: adminonvif and password

Demo Unit: NVR3216

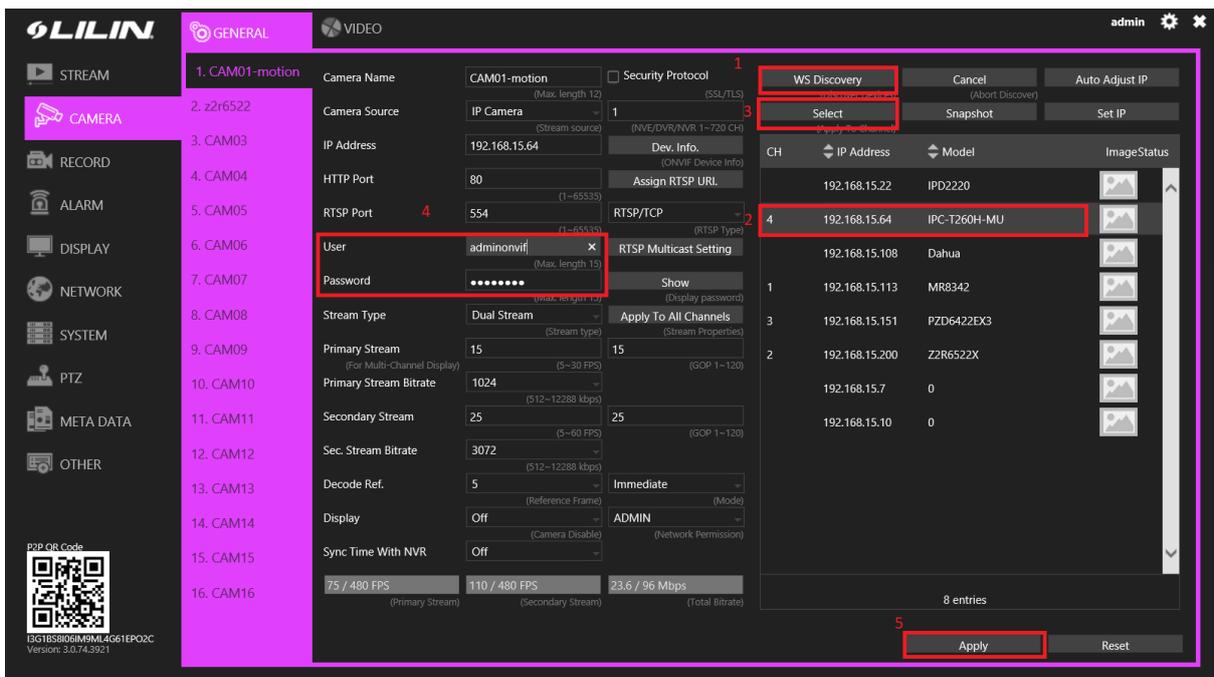

Setup Completed.

[Type here]