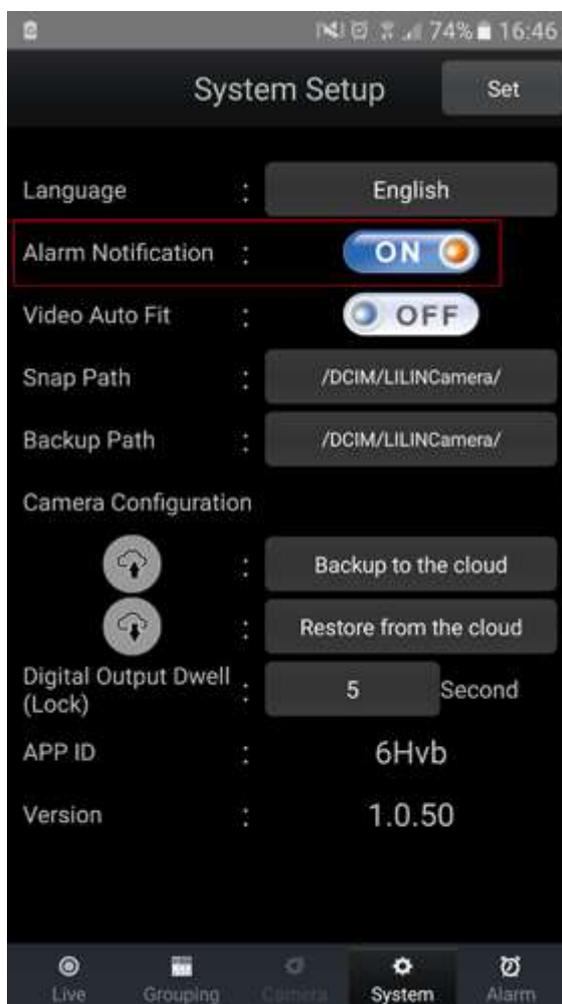# How to enable or disable push notifications on the LILIN Viewer App

To enable or disable notifications on the LILIN Viewer app simply open the app and select 'System' from the menu bar across the bottom of the app.

Ensure the 'Alarm Notification option is enabled.

System screen from an Android Device   **System screen from an Apple Device**