# PDR-2160 Digital Video Recorder Wiring Diagram

This diagram shows the basic wiring configuration for the PDR-2160 Digital Video Recorder, High Speed Domes and PIH-931D Keyboards.

To do this please follow the below instructions.

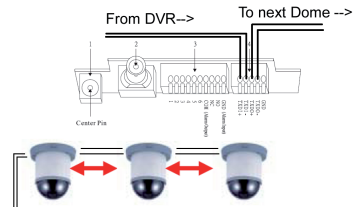





Dome Setup

Make sure dome camera is addressed to corresponding video input used on back of DVR

RS485 cable from DVR runs to TXDI + & - port on camera base

If connecting more then one dome camera run from TXD0 + & - in to TXDI + & -

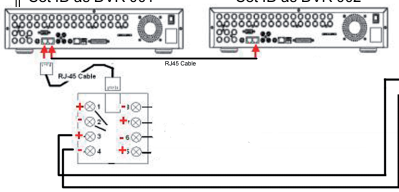


DVR Setup

Set DVR ID from menu screen
When asked about cascading, please select yes.
(See page 36 of PDR-2160 Manual)

Keyboard 1

Set keyboard ID to 1
Set Keyboard in DVR Mode
Set Protocol as DVR then 2160
(See page 8 + 9 of PIH 931D manual)

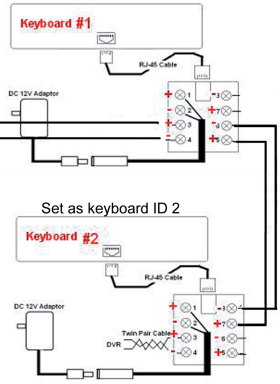


Keyboard 2

Set keyboard ID to 2
Set keyboard to DVR mode
Set protocol as DVR then 2160
(See page 8 + 9 of PIH 931D manual)