



## Merit LILIN Application Note Fermax Doorphone and LILIN Cameras

Document Number : A00040  
Date : 2014/01/26  
Dept: Technical Support, Taipei

**Subject:** This document describes how to connect LILIN IP cameras to Fermax doorphone system.

### Requirements:

LILIN Pro series IP camera firmware requirement: version: 1.0.57y or above

LILIN L series IP camera firmware requirement: version: 1.1.13y or above


Fermax VIVO LYNX MONITOR

Step #1: Connect LILIN IP cameras to a PoE switch.

Step #2: Use IPScan tool for scanning LILIN cameras.

Step #3: Change IP addresses of LILIN cameras starting from 10.200.0.2.


Step #4: Set subnet mask address to 255.0.0.0 and gateway to 10.200.0.254.

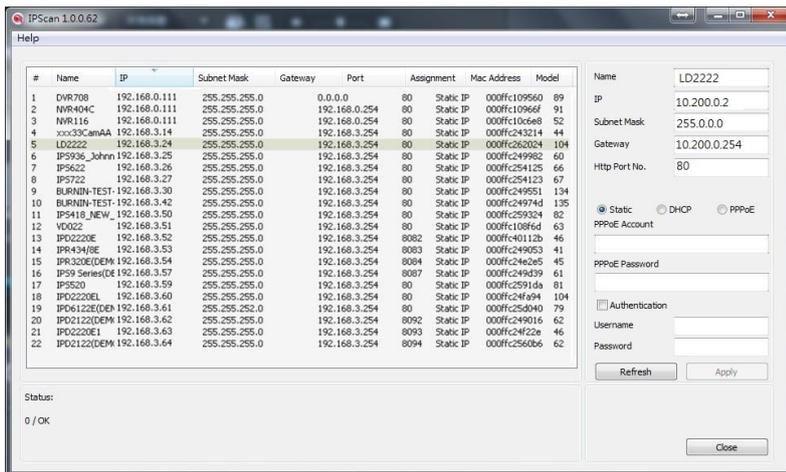

Step #5: Double-click on the camera via IPScan for launching Internet browser.

Step #6: Login to the camera by the default username and password "admin" and "pass".

Step #7: Select Fermax driver at Advance->Network->HTTP/RTSP Service.

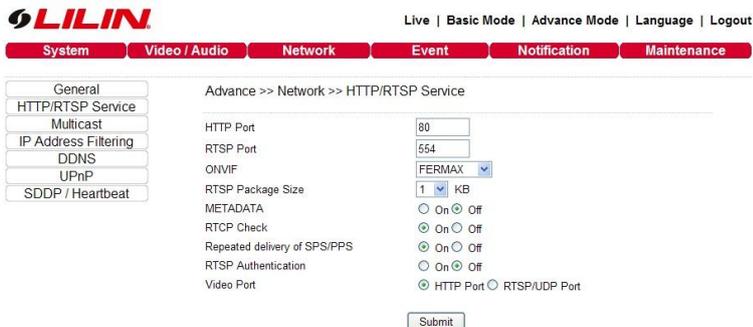

Step #8: Connect Fermax doorphone system to the PoE switch.

Step #9: You are ready to see the video of the IP camera via Fermax doorphone.